

ENGLISH

# INSTRUCTION MANUAL

# RETROX<sup>®</sup>

FC LOADER & GAME CONSOLE




 **HYPERKIN<sup>®</sup>**  
PLAY WELL. LIVE WELL.

[www.hyperkin.com](http://www.hyperkin.com)


Thank you for purchasing the RetroN<sup>®</sup> Gaming System. For your safety and the safety of others, please carefully read the instruction manual before using this product.

## Setting Up the RetroN<sup>®</sup>

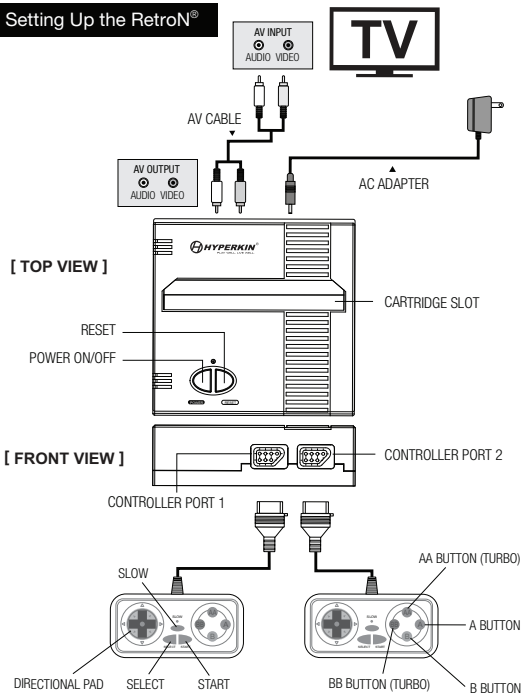

1. Insert the AV Cable into the AV port on the RetroN<sup>®</sup>.
2. Insert the other end of the AV Cable into the AV ports on the TV.
3. Insert the AC Adapter into the DC port on the RetroN<sup>®</sup>.
4. Plug the AC Adapter into a power outlet.

## Playing NES Cartridges on the RetroN®

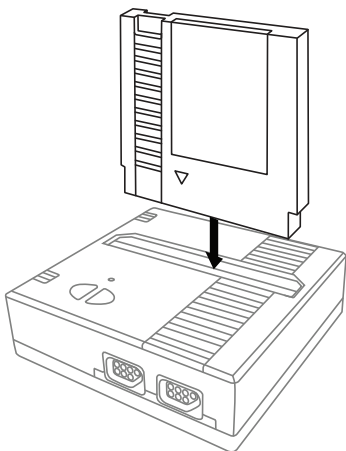

1. Insert the cartridge into the cartridge slot.
2. Turn ON the RetroN® by pressing the Power button.
3. While ON, you can reset the RetroN® by pressing the Reset button.
4. When done playing, press the Power button to turn OFF the RetroN®.

## Using the RetroN® Controller(s)

With the RetroN® turned off, insert a controller into the Player 1 slot. For two-player games, insert the second controller into the Player 2 slot. The RetroN® is also compatible with original NES controllers.

© 2015 Hyperkin®. Hyperkin® et RetroN® et leurs logos sont des marques commerciales et/ou des marques déposées de Hyperkin®, et/ou de ses sociétés affiliées. Tous les autres noms et images de produits, des marques ou des marques déposées sont les propriétés de leurs propriétaires respectifs. C'est un produit 100% non-officiel et n'est pas fabriqué, garanti et parrainé, homologués ou approuvés par Nintendo. Fabriqué en Chine. Tous droits réservés. Caractéristiques du produit, les apparences et les spécifications peuvent être soumises à modification sans préavis.

